


Screw-mounted Slide Rail Specifications

Product Name: Screw-mounted Slide Rail Specifications
 Specifications and Model: P/N:0304100005

1. Dimensions

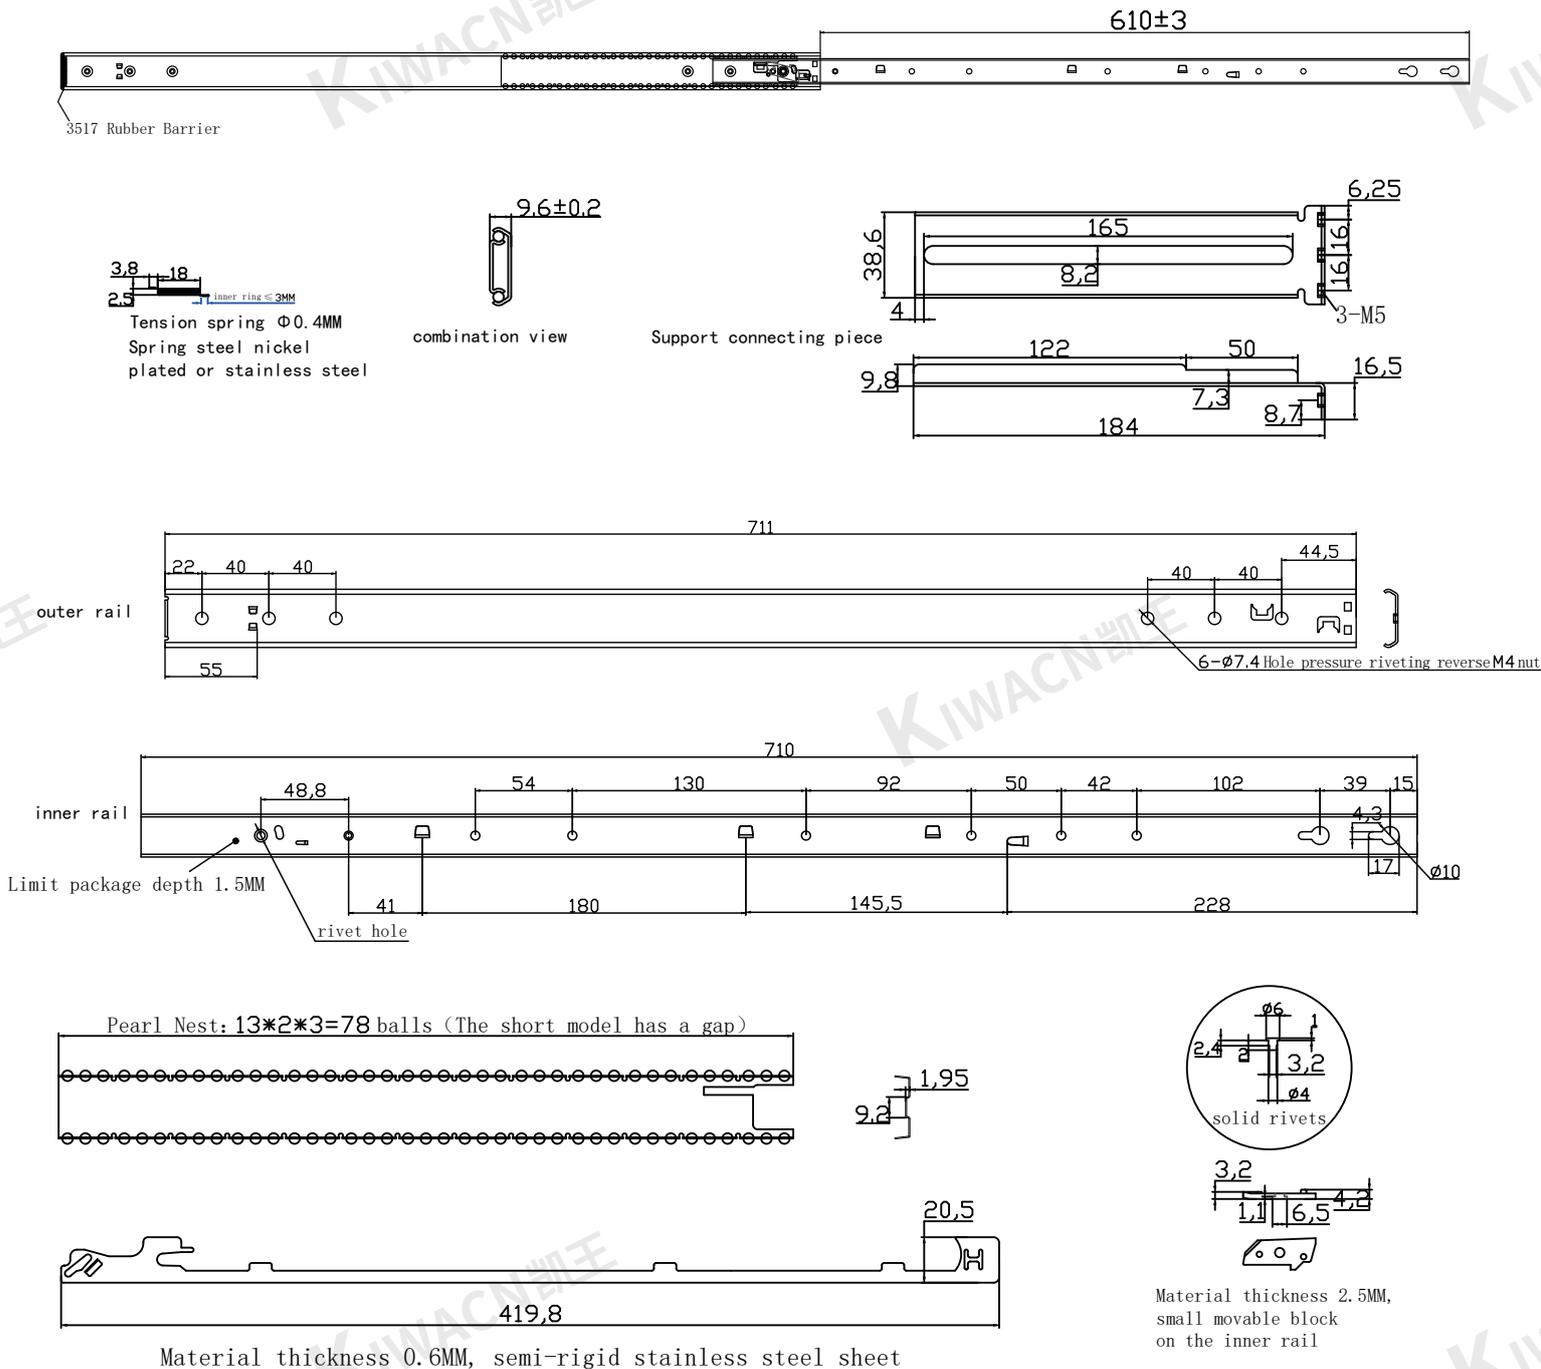


Installation Instructions

1. Install the rails onto the rack

(ensure that the front and rear brackets are at the same height on the rack)


- 1.1 Adjust the position of the rear bracket of the slide rail to install the slide rail to the correct position of the front and rear columns of the cabinet, and ensure that the front and rear ends of the slide rail are stuck. The hook has hooks to the cabinet columns.
- 1.2 Tighten the adjusting nut on the rear bracket.
- 1.3 Install and tighten the M adapter studs to the front and rear ends of the slide rails. There are a total of 6 locks for each pair of slide rails.

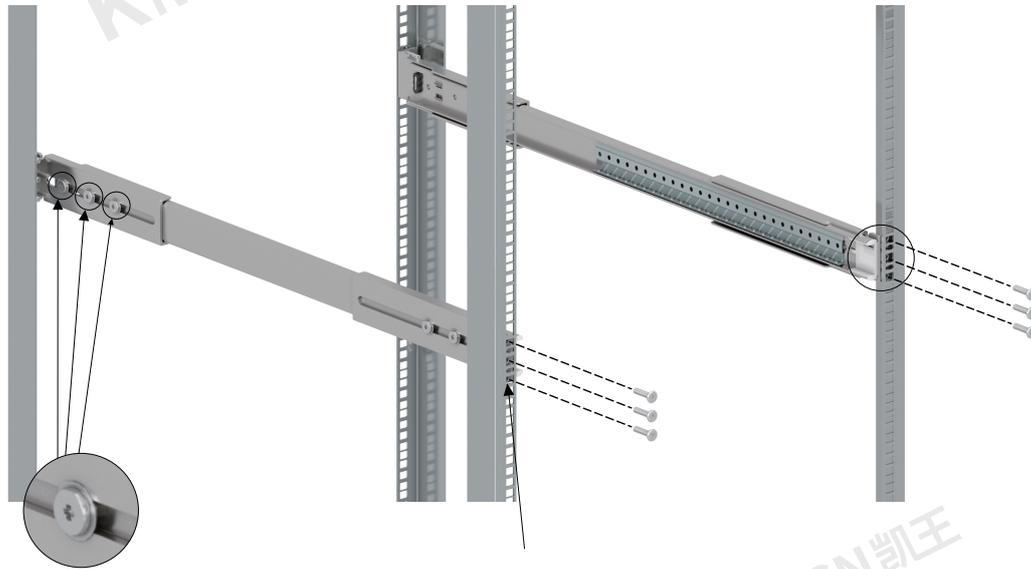

Adjustment nut for rear bracket

Six M5 adapter studs per pair of slide rails

2. Pull the guide rail to its maximum stroke and take out the inner rail as shown below.

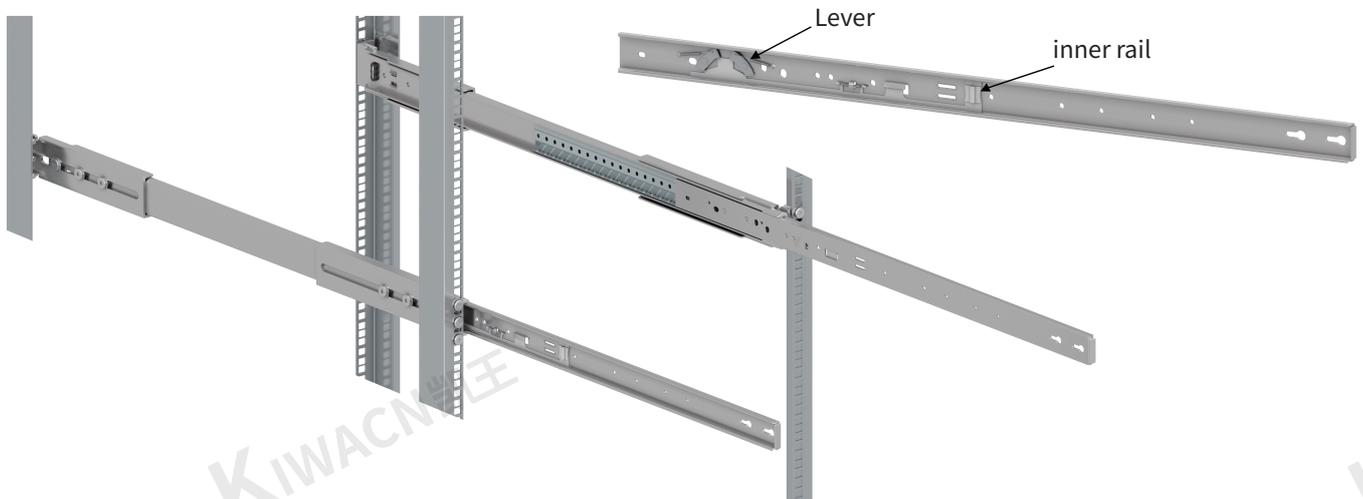

Move the lever upward on the left hand slide rail to pull out the inner rail in the H direction.

Move the right slide rail downward and pull the lever outward in the H direction to pull out the inner rail.

3 Install inner rails on both sides of the chassis (K24006 & K14007)


3.1 Use screws according to the direction to fix the inner guide rail on the side wall of the chassis.



4. Install the chassis into the rack

Note: Depending on the weight of the chassis, 2 to 4 people may be required to perform this step together

- 4.1 First, move the ball seat to the front end of the middle track. Then, along the G direction, horizontally insert the inner rail of the chassis into the ball seat.
- 4.2 When installing the rails, ensure that both sides of the server are kept level, and insert the inner rails simultaneously in a horizontal direction.
- 4.3 Ensure that the inner rails have entered the guides and ball seats before proceeding to push them into the chassis.
- 4.4 Only release the chassis after confirming that the inner rails have entered at least half of the ball seats.
- 4.5 There is a limiting buckle on the inner rail. When pushing it into the second section, you need to flip this buckle to enter the third section for complete closure
- 4.5 If you find that the inner rails have not entered the ball seats, please repeat the above steps. If necessary, you can use your hand to assist the inner rails into the ball seats.
- 4.6 Unlock both levers on the sides, then push the chassis to fully close it. Perform at least one complete open and close cycle of the chassis to ensure the slides are correctly installed.

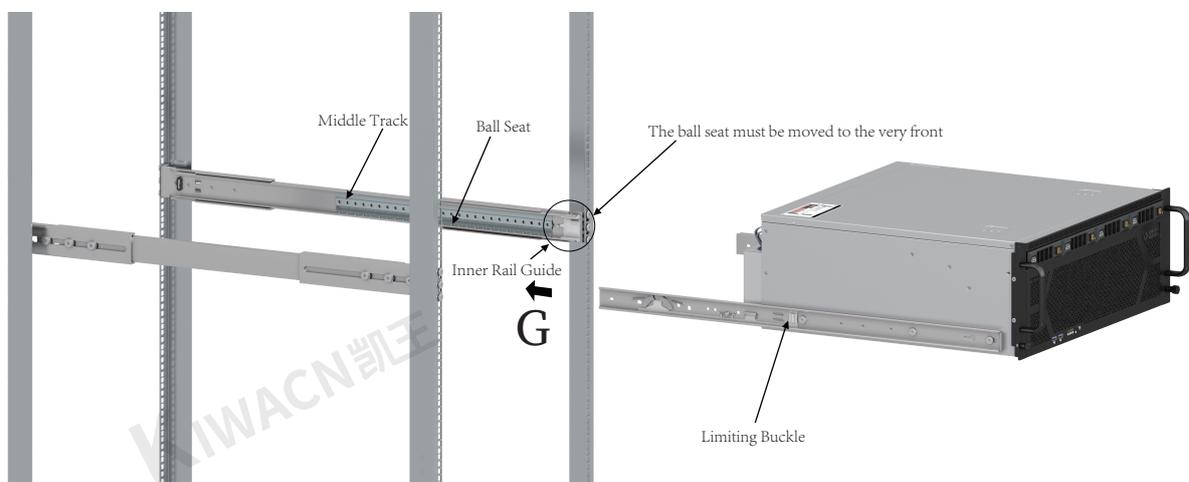

Note: Please make sure to insert horizontally in this direction. Otherwise, it may damage the ball seats and cause the slides to not function properly.