
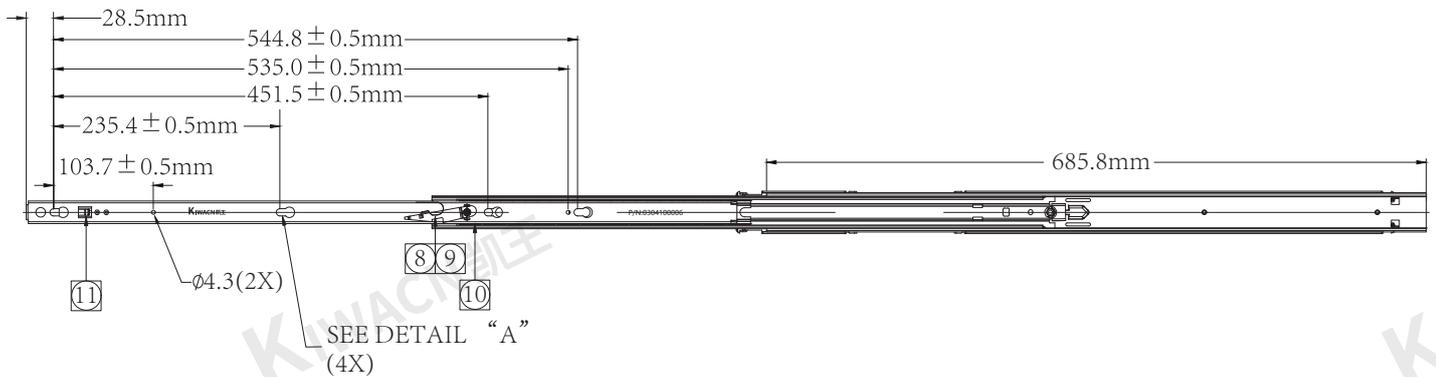
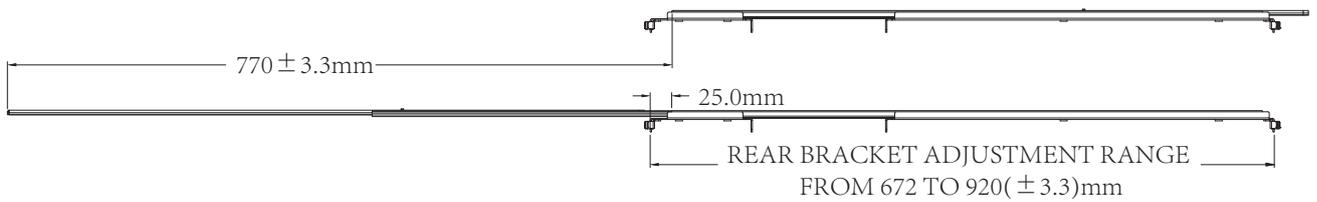
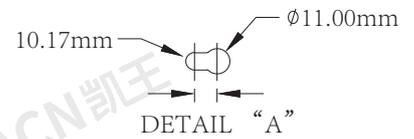
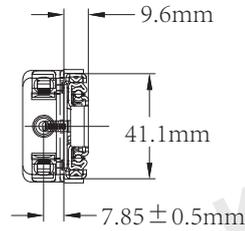


# Slide Rail Specification

Product Name: Slide Rail

Specifications and Model: P/N:0304100006

## 1. Dimensions

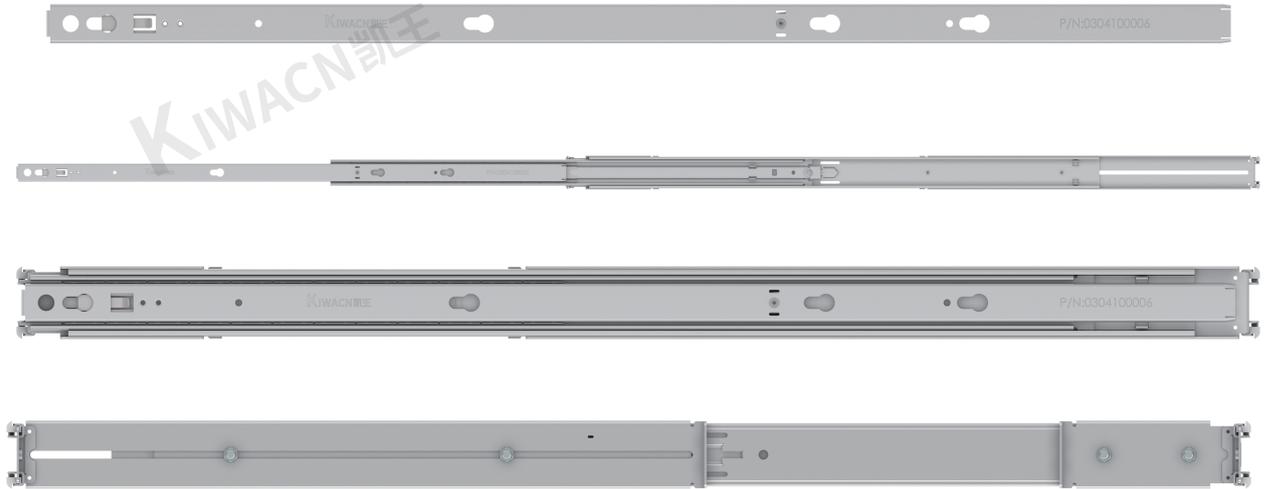


## 2. Part Number P/N:0304100006

# Installation Instructions

## 1. Install the rails onto the rack

(ensure that the front and rear brackets are at the same height on the rack)

- 1.1 Adjust the position of the rear bracket of the rail to install it in the correct position on the front and rear pillars of the cabinet. Ensure that both ends of the rail hook onto the cabinet pillars securely.
- 1.2 Tighten the adjustment nut on the rear bracket after adjustment.
- 1.3 Install and tighten the M-threaded adapter bolts at the front and rear ends of the slide rail. Secure a total of four bolts for each pair of slide rails.

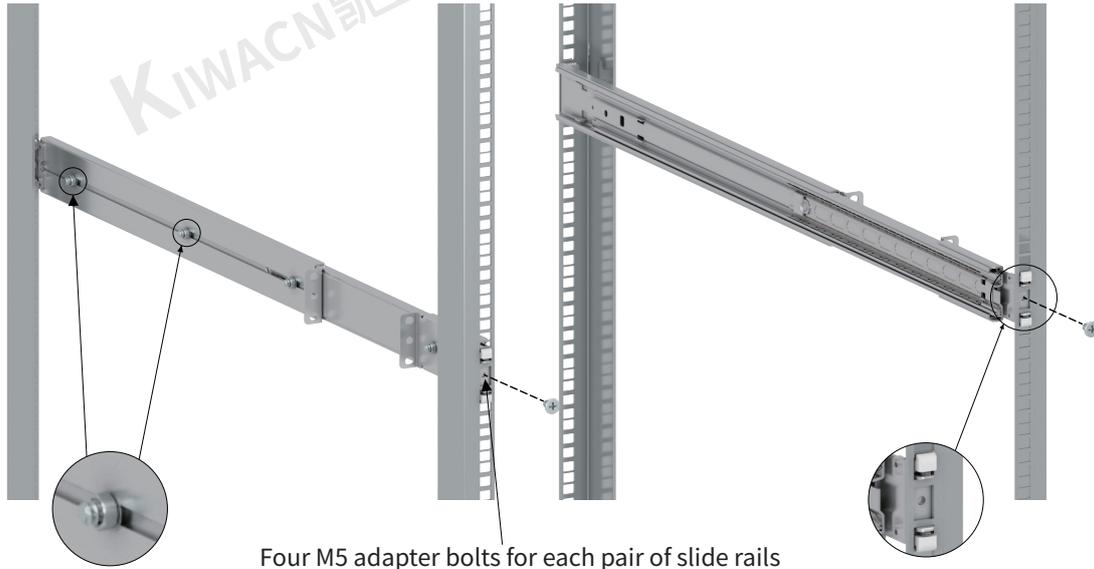


The adjustment nut on the rear bracket

Four M5 adapter bolts for each pair of slide rails

The hooks of the slide rail should latch onto the front and rear pillars of the cabinet


## 2. Extend the slide rail to its maximum position, then remove the inner rail as shown in the diagram below

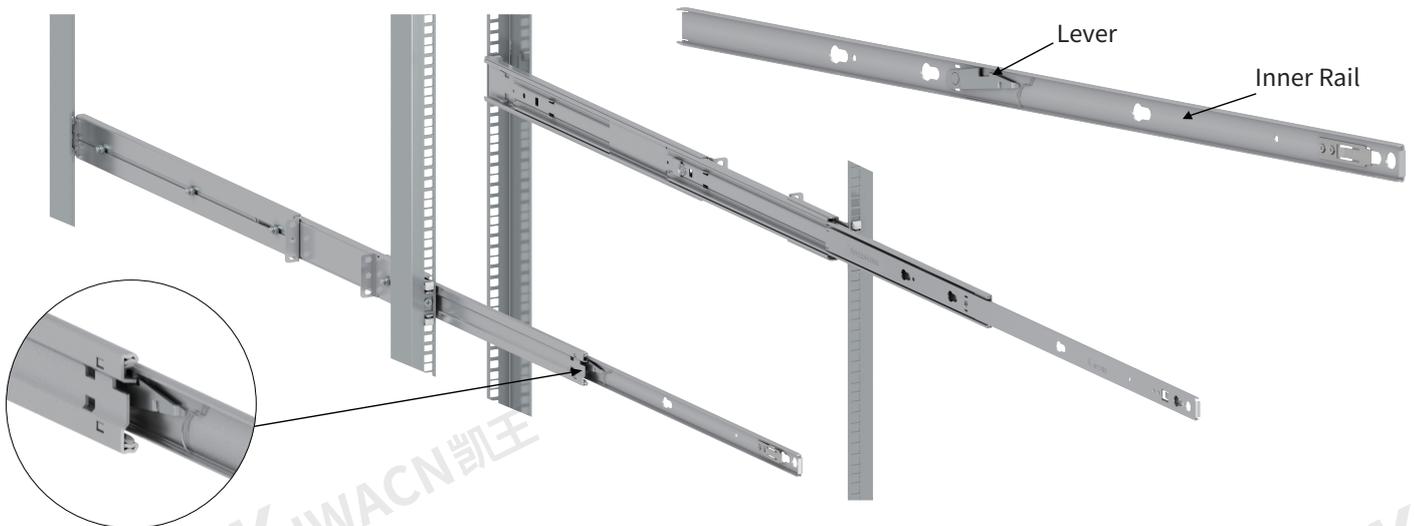

Use your left hand to lift the lever upwards on the slide rail, then pull the inner rail outwards along the H direction  
 Use your right hand to push down on the lever on the slide rail, then pull the inner rail outwards along the H direction

### 3. Install the inner rail on both sides of the chassis

3.1 Secure the inner rail to the side wall of the chassis and ensure that the inner rail tabs of the slide rail engage the T-shaped pins on the chassis.

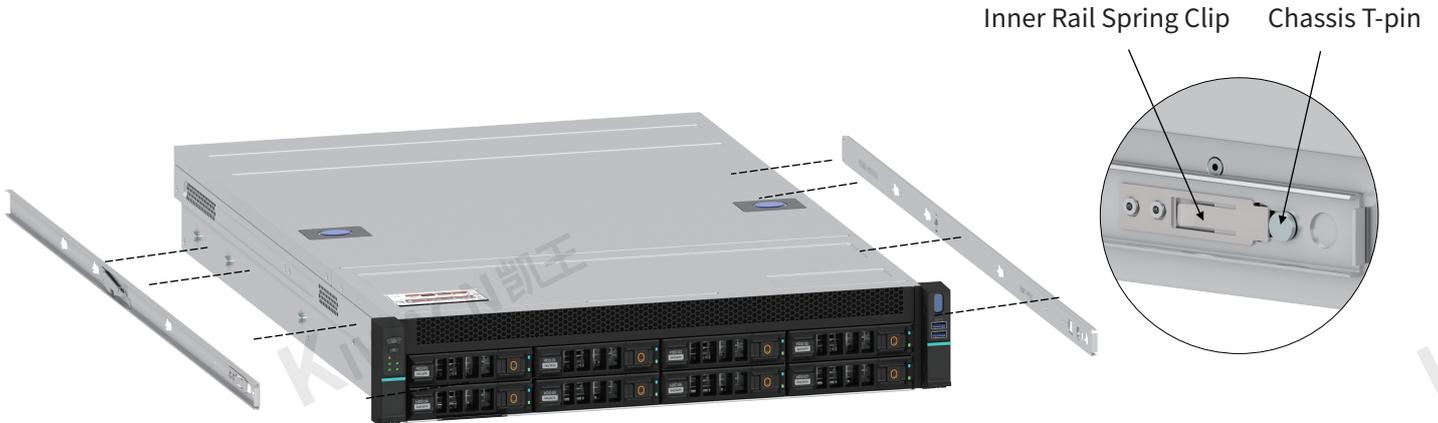


The inner rail spring clip engages with the chassis T-pin.

### 4. Install the chassis into the rack

Note: Depending on the weight of the chassis, 2 to 4 people may be required to perform this step together

- 4.1 First, move the ball seat to the front end of the middle track. Then, along the G direction, horizontally insert the inner rail of the chassis into the ball seat.
- 4.2 When installing the rails, ensure that both sides of the server are kept level, and insert the inner rails simultaneously in a horizontal direction.
- 4.3 Ensure that the inner rails have entered the guides and ball seats before proceeding to push them into the chassis.
- 4.4 Only release the chassis after confirming that the inner rails have entered at least half of the ball seats.
- 4.5 There is a limiting buckle on the inner rail. When pushing it into the second section, you need to flip this buckle to enter the third section for complete closure
- 4.6 If you find that the inner rails have not entered the ball seats, please repeat the above steps. If necessary, you can use your hand to assist the inner rails into the ball seats.
- 4.7 Unlock both levers on the sides, then push the chassis to fully close it. Perform at least one complete open and close cycle of the chassis to ensure the slides are correctly installed.

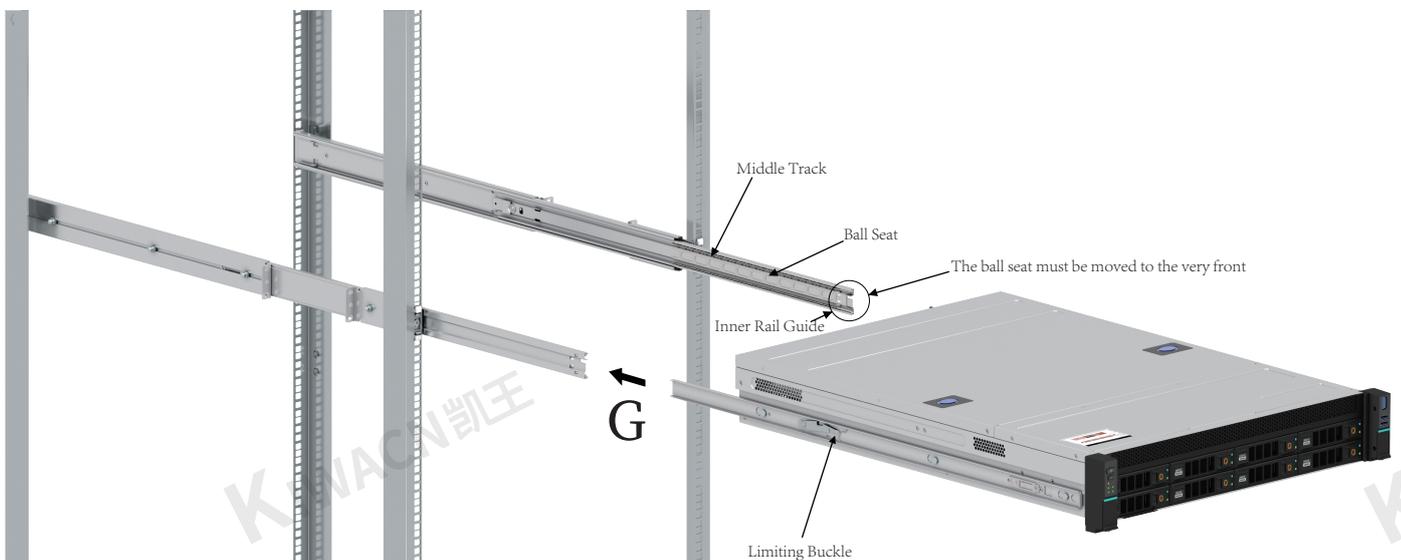

Note: Please insert horizontally in this direction to prevent damage to the ball seat, which may hinder the normal sliding of the slide rail.